Your Voice Drives Us to Be the Best!



Valued Customer,

Thank you so much for your order! We are 100% dedicated to your complete satisfaction. Please leave *Five-star Review* and *Feedback*, contact us to get 10% discount code for all our robots on official shop! (<u>hiwonder.com</u>)

Here is how to get your discount:

- ◆ Log in your Amazon account.
- Browse your order history and find our product in "Your Orders".
- Click [write a product review] to share your review.
- Click [submit] to publish your review " $\star \star \star \star \star$ " and "Submit".
- ♦ Send you Order ID and REVIEW SCREENSHOT to us to get discount code:
 ∞ : support@hiwonder.com / support@lewansoul.com
- Wait for 1 business day to get your discount code form Hiwonder!



LeArm Robotic Arm Assembly


1. Product list

0			4								
Зрс		3pcs			1pcs			1pcs			2pcs
Long U-shaped bracket		-	Side cover bracket			Small U-shaped bracket			Multifunctional Bracket		
Rotational station		A Set	Bearing		1pcs	Power Adapter		1pcs	Large bottom plate		1pcs
Clamper		1pcs	LDX-218 digital servo		2pcs	LFD-06 digital	LFD-06 digital servo		LD-1501 MG digital servo		1pcs
Wireless handle and handle receivcer		A Set	Controller		1pcs			Several	Screwdriver		1pcs
											0
	<u>М4*8</u>		M3*8			Small Bearing 1pcs	M4 Screw Nut 20pcs		M3 Screw Nut 10pcs	© M2 Screw Nut 10pcs	
	Copper Column 4pcs.		Nylon Column 10pcs				M4*8 Screw 12pcs		M3*10 Screw 1pcs	M3*8 Screw 10pcs	
M4*40 Copper Column 4pcs	M4*15 Copper Column 4pcs		M3*15 Nylon Column 4pcs	M4*35 Screw 5pcs		M4*20 Screw 5pcs	M3*6 Screw 20pcs		M2*6 Screw M2*5 S 10pcs 35p		Screw


2. Assembly

(1)Rotational station


Side bracket*1/rotational station*1/M2*6 machine screw*4/M2 nut*4

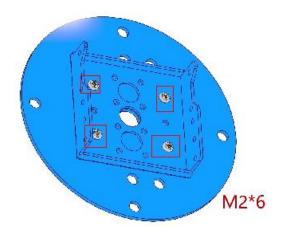

rotational station*1/Metal servo horn*1/M3*6machine screw*4

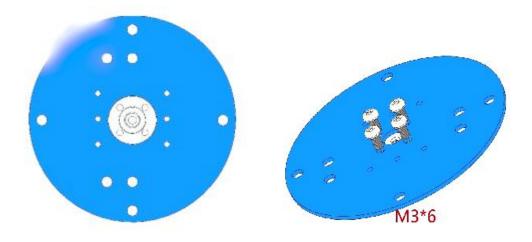


Please place above rotation stations on both sides of the bearing, as shown in the figure:

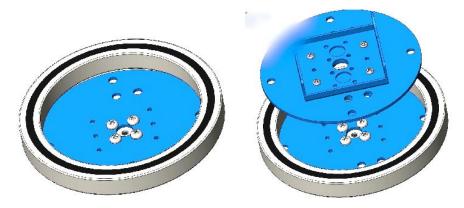


Bearing*1/M4*20 machine screw*4/M4 nut*4



LD-1501 Servo*1/M4*8 machine screw*4/M4 nut*4

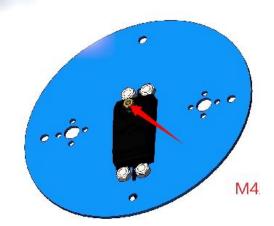

Place two rings on the both sides of station, as shown in the figure: (ring*2/M4*35 machine screw*4/M4*15 copper pillar*4)

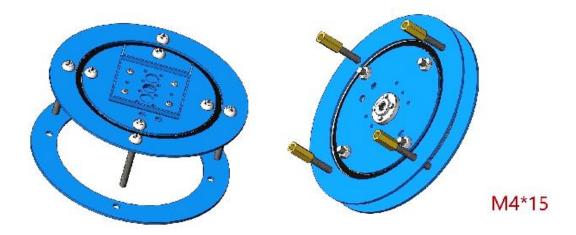


As shown in the picture to assemble the two parts, and then fix them with M4*40 copper pillar. And install M3*6 machine screws. (M4*40 copper pillar*4/ M3*6 machine screw*1)



(2)LDX-218 Servo


Main servo horn direction:

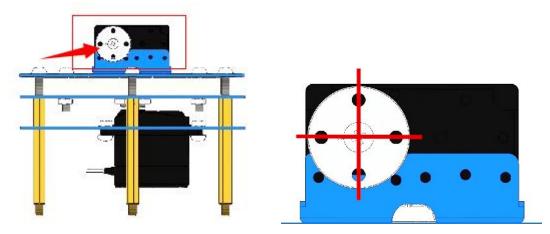


Main servo horn(M2*5 Self-tapping screws*2) Auxiliary servo horn(M2*5 Self-tapping screws*3)



(3)Bracket (Long U-shaped bracket*2/ M3*8 flat head screw*4/ M3 nut*4)

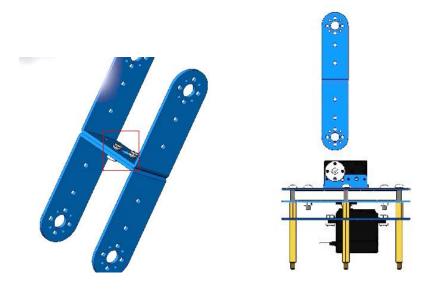


Main servo horn(M3*6 machine screw*4) Auxiliary servo horn(M2*5 Self-tapping screws*4)

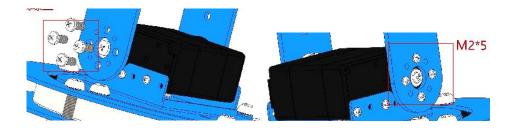

(Long U-shaped bracket*1/ small U-shaped bracket*1/ M2*6 machine screw*4/ M2 nut*4)

Please note that the installation direction

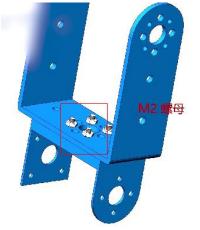





(4)LDX-218MG


Main servo horn(M2*5 Self-tapping screws*3) Auxiliary servo horn(M2*5 Self-tapping screws*4)



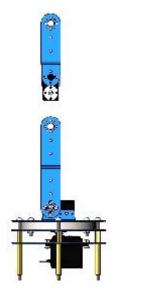

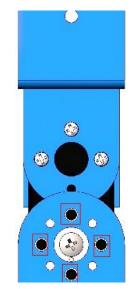

Main servo horn(M3*6 machine screw*4) Auxiliary servo horn(M2*5 Self-tapping screws*4)

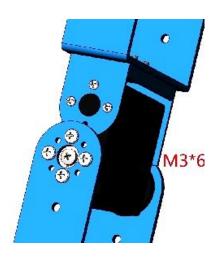







Multifunction bracket*1/ M3*10 flat head screw*1/ small bearing*1/ M3 nut*1



Multifunction bracket*1/ M3*8 flat head screw*4/ M3 nut*4

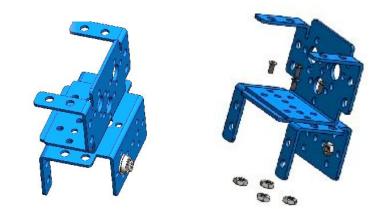

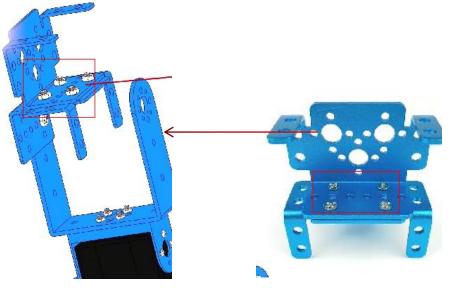


(Please note that the installation direction)

(5)LFD-06 servo (M3*6 machine screw*4/ M4 nut*4/ M2*5 Self-tapping screws*4)





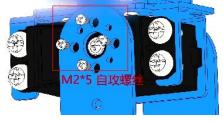


M2*5 Self-tapping screws*2





(M4*8 flat head screw*4/ M4 nut*4)

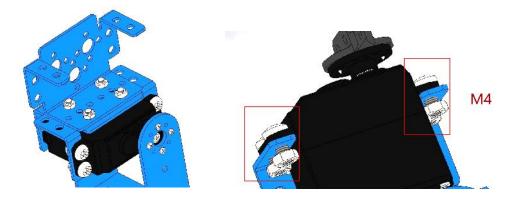

(M3*10 machine screw*2/ M3 nut*2)








(6)Metal plate (M3*8 flat head screw*9)



(M3*8 Nylon column*9)




(M4*8 Copper pillar*4/)

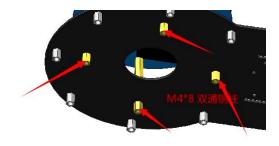

(7)Controller



(M4*8 Copper pillar*4/)

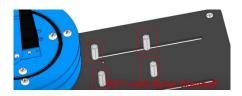

Controller/ M3*6 machine screw*4



